Accessory Fitting Instructions


Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

Knee Pad Kit	
Kit Number	**Models**
36TA0042	Roadster 400

Parts supplied

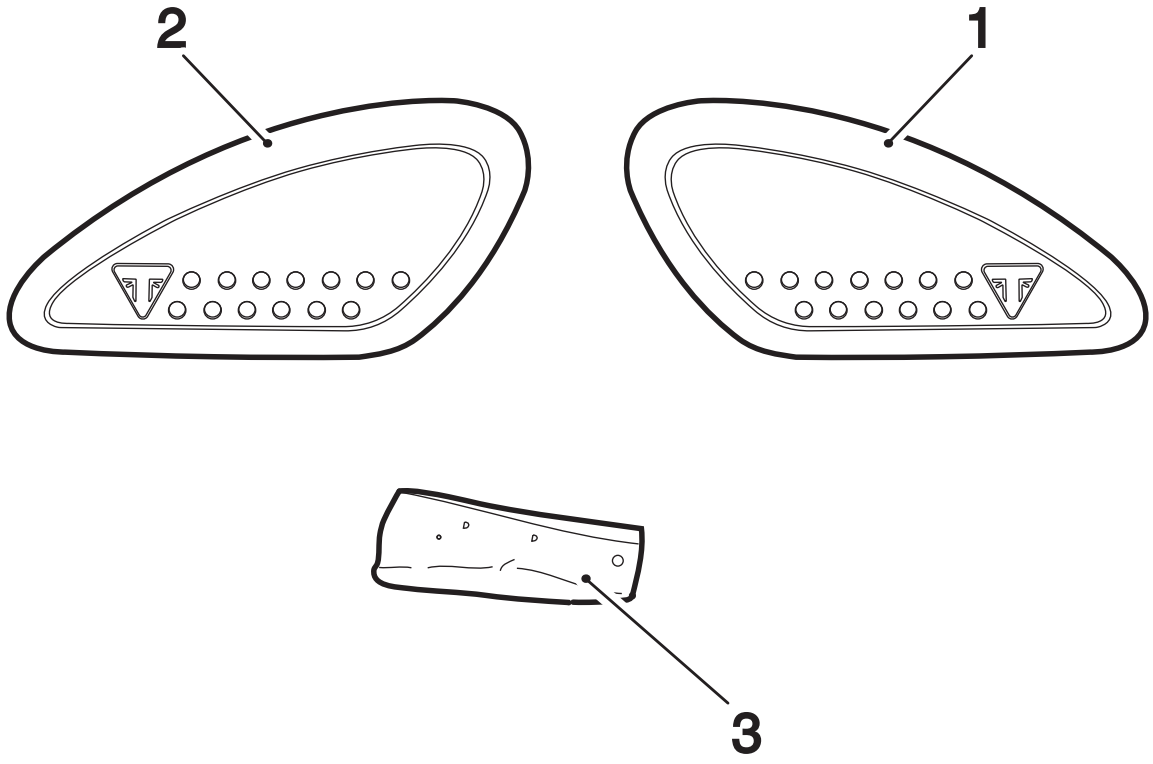

1. Knee pad, left hand	1 off	3. Cleaning wipe	1 off
2. Knee pad, right hand	1 off		

© Triumph Designs Ltd. 2023

⚠ WARNING

Fit only genuine Triumph accessories to those models approved by Triumph as listed in the associated Triumph fitting instructions.

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should never be fitted to any other Triumph model or to any other manufacturer's motorcycle.

Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle, will affect the performance, stability and handling of the motorcycle.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Always have Triumph approved parts, accessories and conversions fitted by a competent person with the specialist knowledge and technical understanding of motorcycles, such as an authorised Triumph dealer.

The fitment of parts, accessories and conversions by a person without the specialist knowledge and technical understanding of motorcycles may affect the handling, stability or other aspects of the motorcycle's operation.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

A torque wrench of known accurate calibration must be used when fitting this accessory kit.

Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Make sure the motorcycle is stabilised and adequately supported.

Do not support the motorcycle on any ancillary component, the exhaust system or any other non structural parts of the motorcycle frame.

A correctly supported motorcycle will help prevent it from falling.

An unstable motorcycle may fall resulting in motorcycle damage, serious injury or death.

NOTICE

Triumph offers a broad range of approved genuine accessories for your motorcycle.

We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit.

To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorised Triumph dealer.

NOTICE

Once the knee pads have been fitted, they will become an integral part of the fuel tank and cannot be removed.

NOTICE


Read the warning notices printed on the cleaning wipe packet.

The surface to which the knee pads are affixed must be clean and dry to make sure that the adhesive has a sound base to adhere to. Use the cleaning wipe supplied for this purpose.

The ideal adhesive application temperature is 15.6°C (60°F) to 38°C (100°F).

Knee Pad Fitment

1. Using the cleaning wipe provided, clean the areas on the side of the fuel tank, as shown.

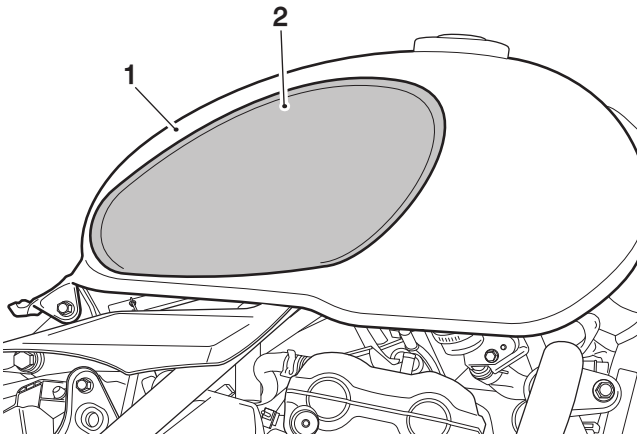

1. Fuel tank
2. Cleaning area, right hand side shown


NOTICE

When fitting self-adhesive parts care must be taken to make sure positioning is correct and accurate.

Once the adhesive has been attached to the mounting surface, there is no satisfactory method of removal and re-positioning if incorrectly aligned.


Initial bonding is instant, full bonding is achieved after 72 hours.

2. Print out page 5 of the instruction which contains the alignment template for correct positioning of the accessory knee pads.
3. Carefully cut out the template.
4. Attach the alignment template to the right hand side of the fuel tank with masking tape aligning the template with the inner recess radius in the fuel tank as shown.

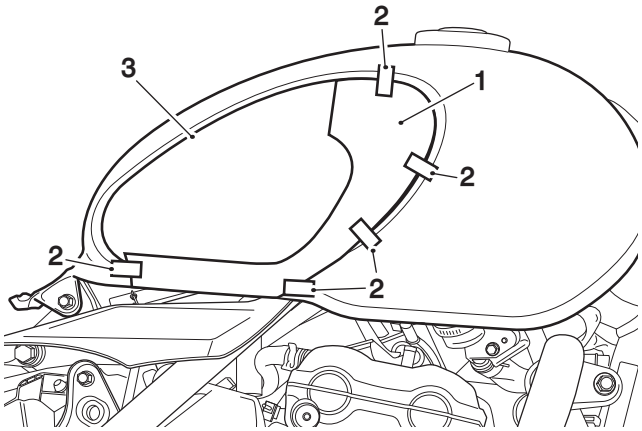

1. Template
2. Masking tape
3. Inner recess radius, fuel tank

5. Collect the right hand knee pad from the kit.
6. Peel away the protective cover from the adhesive strip on the right hand knee pad.
7. Carefully position the right hand knee pad on to the fuel tank aligned with the inner cut out section of the template. as shown.

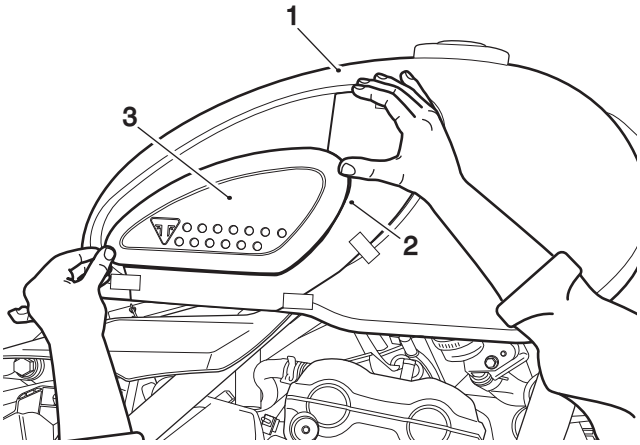

1. Fuel tank
2. Alignment template, inner cut out section
3. Knee pad, right hand

8. Apply firm and even hand pressure across the whole knee pad surface for one minute to make sure a good bond is achieved.
9. Carefully remove the template from the fuel tank.

NOTICE

If the template becomes damaged when it is removed from the fuel tank repeat steps 2 and 3 to produce a new template.

10. Repeat steps 4 to 8 for the left hand knee pad.

⚠ WARNING

After fitting the accessory kit the motorcycle will exhibit new handling characteristics.

Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics.

Operation of the motorcycle when not familiar with any new handling characteristics may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

If, after fitting this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact a competent person with the specialist knowledge and technical understanding of motorcycles, such as an authorised Triumph dealer.

Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Never ride an accessory-equipped motorcycle at speeds above 80 mph (130 km/h).

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.

The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

High-speed operation should only be attempted by riders who have been instructed in the techniques necessary for high-speed riding and are familiar with the motorcycle's characteristics in all conditions.

Only operate this Triumph motorcycle at high speed in closed-course, on-road competition or on closed-course racetracks.

High-speed operation in any other circumstances is dangerous and may lead to loss of motorcycle control which could result in serious injury or death.

NOTICE

The motorcycle must not be operated above the legal road speed limit except in closed-course conditions.

Alignment Template

